

FAQ#10 Làm thế nào để khôi phục mật khẩu mạng Wi-Fi ?

Mật khẩu giúp đảm bảo an toàn cho mạng Wi-Fi của bạn. Nếu bạn quên mật khẩu và cần khôi phục vui lòng làm theo hướng dẫn dưới đây

1. Kết nối máy tính của bạn với router


(1). Kết nối máy tính của bạn với router bằng dây cáp (nếu bạn muốn kết nối bằng Wi-Fi, vui lòng khôi phục cài đặt gốc của router trước) sau đó đăng nhập vào router bằng cách truy cập 192.168.1.1 bằng trình duyệt



(2). Nhấn vào biểu tượng Setup Tool  để truy cập vào giao diện cài đặt của router.



(3). Vui lòng điền User Name và Password để đăng nhập (User Name và Password mặc định là admin)

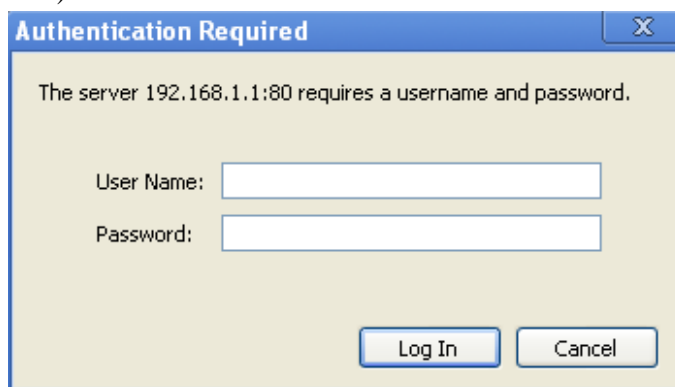

2. Chọn Advanced Setup->Wireless->Wireless ở thanh điều hướng

bên trái.



3. Bạn sẽ thấy mật khẩu ở thanh Encryption key , bạn có thể thay đổi hoặc vô hiệu hóa mật khẩu tại đây.

The image shows the 'Wireless Setup' configuration page. The 'Encryption key' field is highlighted with a red box and contains the value '123354125'. Other settings include SSID (TOTOLINK), Region (China), Channel (9), and Encryption type (AES).

Operation	<input checked="" type="radio"/> Start <input type="radio"/> Stop
SSID	TOTOLINK <input type="text"/> <input type="button" value="Check SSID"/> Mode <input type="text" value="B, G, N"/>
Region	<input type="text" value="China"/>
Channel	<input type="text" value="9 [2.452 GHz, Lower]"/> <input type="button" value="Channel Search"/>
Operation mode	SSID Broadcast <input checked="" type="radio"/> ON <input type="radio"/> OFF WMM <input checked="" type="radio"/> ON <input type="radio"/> OFF
Authentication	<input type="text" value="WPA2PSK/WPA2PSK"/>
Encryption	<input type="radio"/> Disable <input type="radio"/> WEP64 <input type="radio"/> WEP128 <input type="radio"/> TKIP <input checked="" type="radio"/> AES <input type="radio"/> TKIP/AES
Encryption key	<input type="text" value="123354125"/>